



Model Name: PJ-662, PJ-663

Network Port	Power consumption		Default Timer Values	
	Networked Standby mode	Off mode	To Networked Standby mode	To Off mode
USB Port1	2.0W	0.3W	0min	10min
Bluetooth	2.2W	0.3W	0min	10min
IrDA	2.0W	0.3W	0min	10min
All network ports activated and connected	2.2W	0.3W	0min	10min

How to enable/disable Bluetooth

- ❶ Use PJ-600 Series Utility to set **[Wireless Switching Mode]** to **[Enable]**.
- ❷ With the printer off, while holding down the  (Feed) button, press and hold the  (Power) button for at least three seconds, and then check if the Bluetooth indicator light is on (Bluetooth connection established) or is off (no Bluetooth connection).