brother

Brother Mobile Printing Software User's Guide

The contents of this guide and the specifications of this product are subject to change without notice. Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publications. The screen images in this guide may differ depending on your OS or printer.

Version 0

How to use Brother Mobile Printing Software (Brother MPrint)



This software provides an operation check sample for use with the PocketJet series.

Printing

This printer has eight different printing functions.

1 Select 🗟 on the [Program] screen.

The [Brother MPrint] screen appears.

Windows Mobile 5.0 / 6 Professional / 6 Classic

2 Check that by Note Print, schedule Print,



Note Print → Refer to page 3
Schedule Print → Refer to page 6
E-mail Print → Refer to page 10
Task Print → Refer to page 7
Contact Print → Refer to page 8
Clipboard Print → Refer to page 8
Screen Capture Print → Refer to page 9
Image File Print → Refer to page 9
MPrint Utility → This function is not supported by the PocketJet series.

Windows Mobile 6 Standard



Note Print

Memos saved with Notes can be printed.

1 Select 🖳 Note Print on the [Brother MPrint] screen.

A list of memos appears in the [Note Print] screen.

2	Cale at the many that you wish to wint. Only one	
	Select the memo that you wish to print. Only one	Folder list 🖊 Note Print
	The selected memo is highlighted	All Folder
	The selected memo is highlighted.	Name To Do,pwi
		Phone Memo.pwi
	To display the memos in each previously categorized	Meeting Notes.pwi
-15	folder, select the folder list.	Blank Note.pwi 123456789 1234
		TESTIN~1.PWI
3	Select [Preview] in the Printer menu.	DIGHIK 19006,0991
	The [Print preview] screen appears.	TESTIN~1.PWI
		Note1.pwi
	If [Print] was selected, printing will begin without the [Print	
U	preview] screen being displayed.	
		I III Print
4	Position the printer and the device running Windows	
	Mobile so that their IrDA infrared ports are facing each	
	other less than 20 cm/7.9" apart (MW-120/260/PocketJet	
	series only).	
	 Make sure that the printer is turned on. 	20cm/7.9"
\odot	• The IrDA infrared port is in the middle on the right side	
	of the printer (MW-120/260 only)	
	• The IrDA infrared port is next to the USB port (PocketJet	
	Series only).	
	Bluetooth	
	Bidelootii.	
5	Select the Print button.	롿 Print preview
	After the Windows Mobile device detects the printer, printing	Press the Print
	begins.	button to start
		printing.
(\mathbf{I})	• The printed layout may differ depending on the size of	
\odot	paper selected with [Printer setting].	
	• I ne [Print preview] screen allows you to view an image	
	or the data as it will be printed. Text may be difficult to	
	The first time you use Bluetooth communication, select	

u use Bluetooth communication, select first time y a COM port for the printer, as shown on the next page.



Print

Printer setting Graphics

Cancel

#* *****2 **•**€ ×

Tuesday, August... Tuesday, August... Tuesday, August...

Tuesday, August...

Tuesday, August... Preview...

гасьаау, мадазс...

Preview

Settings

Tools Sort Folder

Quit Menu ь

Date

Saturd Wed

Saturd

Thur

Printing

3

Advanced settings

Precise print settings can be specified.

Printer settings

1 Select [Printer setting] in the [Print preview] screen.

The [Printer setting] screen appears.

2	The following settings can be specified.
	Printer:
	Select the printer model which you are using.
	• Port:
	Specify the settings depending on the COM port where the
	Bluetooth connection was established.
	(For details, refer to the User's Guide.)
	Devension

- Paper size: Select the paper size which you want to use. The setting is adjusted according to the paper cassette that is loaded into the printer.
- Printing orientation: Portrait/Landscape
- Print mode: Normal/Global
- Number of copies: 1 through 50/Collate

		ok button
🐉 Printer	setting	🚓 🔁 📢 🞯
Printer	MW-260	-
Port	COM8	•
Paper size	A6	•
Printing Orientation	Ortrait	🔿 Landscape
Print mode	Normal	🔘 Global
Number of copies $1 \stackrel{\bullet}{\blacksquare}$		
		ollate
		Cancel
	-	

3 Select 🔤.

The printer settings are applied.

Graphics-processing settings

1 Select Graphics in the [Print preview] screen.

The [Graphics process setting] screen appears.



Text format settings

The font and size of the printed text can be changed.



The text format settings are applied.

Schedule Print

Schedules saved with Calendar can be printed.



Printing a specified date

The period of time to be printed can be specified.



- ſ
- The period of time to be printed can be specified. $(\rightarrow$ "Printing a specified date" on page 7)
- The layout in which data is printed can be specified.
- $(\rightarrow$ "Template setting" on page 6)

The procedure continues in the same way as with the Note Print (\rightarrow page 3).



Contact Print

Names, address and telephone numbers saved with Contacts can be printed.

1 Select 🖳 Contact Print on the [Brother MPrint] screen.

A list of contacts appears in the [Contact Print] screen.

2 Select the box to the left of the contact that you wish to print. More than one name can be selected.

A check mark appears.



The layout in which data is printed can be specified. $(\rightarrow$ "Template setting" on page 6)

 Contact Print
 Cart € 8:12
 All Contac...

 All Contac...
 ✓

 Name
 Company

 WAAA Factories Co.
 Brother Industrie...

The procedure continues in the same way as with the Note Print (\rightarrow page 3).

Clipboard Print

The images and text moved to the Clipboard can be printed.

The Clipboard is the name of the location where data that was cut or copied is stored.

1 Select 🖶 Clipboard Print on the [Brother MPrint] screen.

The contents of the Clipboard appear in the [Clipboard Print] screen. The procedure continues in the same way as with the Note Print (\rightarrow page 3).

Screen Capture Print

The currently displayed screen of the Pocket PC can be printed.

1 Select Screen Capture Print on the [Brother MPrint] screen.

A toolbar appears in the upper-right corner of the screen.

2 Display the screen that you wish to print.

3 Select **a** on the toolbar.

The captured screen appears in the [Print preview] screen. The procedure continues in the same way as with the Note Print (\rightarrow page 3).



Screen capture print settings

The time until the data is imported and the size of the captured area can be specified.

1 Select **W** on the toolbar. The [Screen capture print settings] screen appears. **2** The following settings can be specified. ok button · Capture delay time: 🐉 Screen capturer pri 👝 🕂 8:03 🧕 0 to 10 seconds Capture range Desktop Specifies the length of time until the image is imported after 2 is Capture delay time 0 🖨 Sec. selected. · Capture range: Printer setting Selection range (Use the stylus to select the desired area.)/Client Graphics setting (Area indicated by in the illustration at the right)/Desktop (Entire Cancel screen) n capturer pri 📇 🍕 8:03 3 Select 🔤 .

The screen capture settings are applied.



Image File Print

Saved image files (in BMP, JPEG or PNG format) can be printed.

Select strate File Print on the [Brother MPrint] screen. The [Image File Print] screen appears.

2 Tap the image file that you wish to print. Only one file ok but a b

The procedure continues in the same way as with the Note Print (\rightarrow page 3).



E-mail Print

Saved e-mails can be printed.

1 Select 🕞 E-mail Print on the [Brother MPrint] screen.

A list of e-mails appears in the [Email Print] screen.

2 Select the e-mail that you wish to print. Only one e-mail can be selected.

The selected e-mail is highlighted.

The layout in which data is printed can be specified. $(\rightarrow$ "Template setting" on page 6)

🎊 Email Print	4 € 6:00 😵
Outbox 🗸	All 🔫
То	Subject
brother	Meeting

The procedure continues in the same way as with the Note Print (\rightarrow page 3).

