
LYNC-708

**8" Wall-Mount Panel PC with Intel® Atom™
Processor N2600 1.6GHz**

User's Manual

Version 1.0

P/N: 4012070800100P

2014.07

CE

RoHS
VERIFIED

Revision History

Version	Time	Description
1.0	2014/07	Initial release

Revision History	II
Contents	i
Preface.....	iii
Copyright Notice	iii
Declaration of Conformity	iii
CE	iii
FCC Class A	iii
RoHS	iv
SVHC / REACH	iv
Important Safety Instructions	v
Warning.....	vi
Lithium Battery Replacement.....	vi
Technical Support	vi
Warranty.....	vii
Chapter 1 - Introduction.....	1
1.1. The Computer	2
1.2. About this Manual	2
1.3. Specifications.....	3
1.4. Inside the Package	5
1.5. Ordering Information.....	5
1.5.1. Optional Accessories	6
1.5.2. Configure-to-Order Service.....	6
Chapter 2 - Getting Started.....	7
2.1. Dimensions	8
2.2. Tour the Computer	9
2.2.1. Front View.....	9
2.2.2. Rear View	9
2.2.3. Bottom View.....	10
2.3. Driver Installation Note.....	11
Chapter 3 - Engine of the Computer.....	13
3.1. Board Layout.....	14
3.1.1. CPU Module (EmQ-i2506).....	14
3.1.3. Carrier Board (PBQ-900F).....	15
3.2. Jumpers and Connectors.....	16
3.2.1. Jumpers	16
3.2.2. Connectors	18
Chapter 4 - Installation and Maintenance.....	25
4.1. Use Onboard Jumpers and Connectors	26
4.2. Install Hardware	27

Contents

4.2.1. Install SSD	27
4.3. Mount the Computer	28
4.3.1. Panel Mounting	28
4.3.2. VESA Mounting	29
4.4. Wire DC-Input Power Source	32
Chapter 5 - BIOS	33
5.1. Main	36
5.2. Advanced	37
5.2.1. ACPI Settings	38
5.2.2. S5 RTC Wake Settings	39
5.2.3. CPU Configuration	40
5.2.4. IDE Configuration	41
5.2.5. USB Configuration	42
5.2.6. F71869 Super IO Configuration	44
5.2.7. F71869 H/W Monitor	45
5.2.8. PPM Configuration	46
5.3. Chipset	47
5.3.1. Host Bridge	48
5.3.2. South Bridge	49
5.4. Boot	50
5.6. Save & Exit	52
Appendices	53
Appendix A: PenMount Utilities	54
A.1. PenMount Control Panel	54
A.2. PenMount Gesture	59

Copyright Notice

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve the reliability, design and function. It does not represent a commitment on the part of the manufacturer.

Under no circumstances will the manufacturer be liable for any direct, indirect, special, incidental, or consequential damages arising from the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Declaration of Conformity

CE

The CE symbol on your product indicates that it is in compliance with the directives of the Union European (EU). A Certificate of Compliance is available by contacting Technical Support.

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from ARBOR. Please contact your local supplier for ordering information.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC Class A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RoHS

ARBOR Technology Corp. certifies that all components in its products are in compliance and conform to the European Union's Restriction of Use of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive 2002/95/EC.

The above mentioned directive was published on 2/13/2003. The main purpose of the directive is to prohibit the use of lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE) in electrical and electronic products. Member states of the EU are to enforce by 7/1/2006.

ARBOR Technology Corp. hereby states that the listed products do not contain unintentional additions of lead, mercury, hex chrome, PBB or PBDB that exceed a maximum concentration value of 0.1% by weight or for cadmium exceed 0.01% by weight, per homogenous material. Homogenous material is defined as a substance or mixture of substances with uniform composition (such as solders, resins, plating, etc.). Lead-free solder is used for all terminations (Sn(96-96.5%), Ag(3.0-3.5%) and Cu(0.5%)).

SVHC / REACH

To minimize the environmental impact and take more responsibility to the earth we live, Arbor hereby confirms all products comply with the restriction of SVHC (Substances of Very High Concern) in (EC) 1907/2006 (REACH --Registration, Evaluation, Authorization, and Restriction of Chemicals) regulated by the European Union.

All substances listed in SVHC < 0.1 % by weight (1000 ppm)

Important Safety Instructions

Read these safety instructions carefully

1. Read all cautions and warnings on the equipment.
2. Place this equipment on a reliable surface when installing. Dropping it or letting it fall may cause damage
3. Make sure the correct voltage is connected to the equipment.
4. For pluggable equipment, the socket outlet should be near the equipment and should be easily accessible.
5. Keep this equipment away from humidity.
6. The openings on the enclosure are for air convection and protect the equipment from overheating. DO NOT COVER THE OPENINGS.
7. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
8. Never pour any liquid into opening. This may cause fire or electrical shock.
9. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
10. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped or damaged.
 - f. The equipment has obvious signs of breakage.
11. Keep this User's Manual for later reference.

Warning

The Box PC and its components contain very delicately Integrated Circuits (IC). To protect the Box PC and its components against damage caused by static electricity, you should always follow the precautions below when handling it:

1. Disconnect your Box PC from the power source when you want to work on the inside.
2. Use a grounded wrist strap when handling computer components.
3. Place components on a grounded antistatic pad or on the bag that came with the Box PC, whenever components are separated from the system.

Lithium Battery Replacement

Incorrect replacement of the lithium battery may lead to a risk of explosion.

The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer.

Do not throw lithium batteries into the trash can. It must be disposed of in accordance with local regulations concerning special waste.

Technical Support

If you have any technical difficulties, please consult the user's manual first at:
<ftp://ftp.arbor.com.tw/pub/manual>

Please do not hesitate to call or e-mail our customer service when you still cannot find out the answer.

<http://www.arbor.com.tw>

E-mail:info@arbor.com.tw

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Vendor will not be liable for any claim made by any other related party.

Vendors disclaim all other warranties, either expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the hardware, the accompanying product's manual(s) and written materials, and any accompanying hardware. This limited warranty gives you specific legal rights.

Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

This page is intentionally left blank.



Chapter 1

Introduction

1.1. The Computer

ARBOR's LYNC-708 is cost-effective industrial panel PC to feature light weight and slim form factor. The computer comes with rich I/O to meet the demand of the automation and manufacturing process required in modern factories. The system includes two serial ports, two USB ports. One mini-card socket for mSATA SSD is also built on the main board.



Product Highlights

- Cableless and Fanless Design
- Flexible Modular Design
- 8" 1024 x 768 XGA LCD Display w/ LED Backlight
- Front Bezel with Completely Covered Membrane
- Flush Front Panel, IP65-Compliant
- Brightness Control Button
- Anti-spark Power Circuit
- Dual Serial Ports
- Featuring Power Input thru Terminal Block or Power over Ethernet Power Device mode

1.2. About this Manual

This manual is meant for the experienced users and integrators with hardware knowledge of personal computers. If you are not sure about the description in this manual, consult your vendor before further handling.

We recommend that you keep one copy of this manual for the quick reference for any necessary maintenance in the future. Thank you for choosing ARBOR products.

1.3. Specifications

System	
CPU	Intel® Atom™ N2600 1.6GHz processor
BIOS	AMI Flash BIOS
Chipset	Intel® NM10
Memory	Soldered onboard 2GB DDR3 SDRAM
Ethernet Controller	1 x Intel® 82583V GbE controller
Watchdog Timer	1~255 levels reset
External I/O	
Serial Ports	2 x RS-232 DB-9 ports
USB Ports	2 x USB 2.0/1.1 Type-A ports
LAN Ports	1x RJ-45 GbE port w/ IEEE 802.3at/802.3af PoE PD
Storage	
Storage	1 x mini card slot for mSATA SSD (SATA II only)
Audio	
Speaker	2 x 1.5W speakers (optional)
Certification	
EMC / EMI	CE, FCC Class A
Environmental	
Operating Temp.	0 ~ 60°C (32 ~ 140°F)
Storage Temp.	-20 ~ 70°C (-40 ~ 158°F)
Operating Humidity	10 ~ 95% RH @ 60°C (non-condensing)
Vibration	5 ~ 500Hz, 2Grms X,Y, Z axis
Shock	Operating 20G, 11ms X,Y, Z axis
Expansion	
Expansion Bus	1 x mini-card socket for mSATA SSD (SATA II only)
Mechanical	
Chassis	Panel-mounting chassis, Aluminum Front Bezel and SGCC steel chassis
Weight (Net)	1.93 Kg (without VESA bracket)
Dimensions (W x D x H)	274.96 x 40.0 x 207.96 mm (10.82" x 1.57" x 8.18")
Mounting	Panel-mounting and VESA-75/100 mounting

LCD Display	
Size/Type	8" TFT LCD Panel
Max. Resolution	1024 x 768, XGA
Max. Colors	16.2M
Luminance	300 cd/m ²
Touch Screen	5 Wire Resistive Single Touch
View Angle (U/D/R/L)	75°/75°/70°/70°
Button & Indicator	
Function Key	Brightness up/down, Screen on/off
LED Indicator	Power on LED
Power System	
Power Input	DC 12V only from Terminal Block or PoE from RJ-45 Jack
OS Support	
Windows	Windows 7 Professional / Windows Embedded 7 Standard (WS7E)

1.4. Inside the Package

Upon opening the package, carefully inspect the contents. If any of the items is missing or appears damaged, contact your local dealer or distributor. The package should contain the following items:



LYNC-708

1 x LYNC-708 industrial panel PC



1 x **Accessory Box** that contains the following items:

- driver CD
- user's manual
- screws/cable
- 3-pin plug for terminal block

1.5. Ordering Information

LYNC-708

8" Intel® Atom™ N2600 industrial panel PC

1.5.1. Optional Accessories

The following items are normally optional, but some vendors may include them in the standard package, or some vendors may not carry all the items.

PAC-P060W-02 60W AC/DC power adapter kit
Power input: 100 ~ 240 VAC
Power output: 12V, 5A




1.5.2. Configure-to-Order Service

Make the computer more tailored to your needs by selecting one or more components from the list below to be fabricated to the computer.

32GB SSD mSATA MLC 32GB



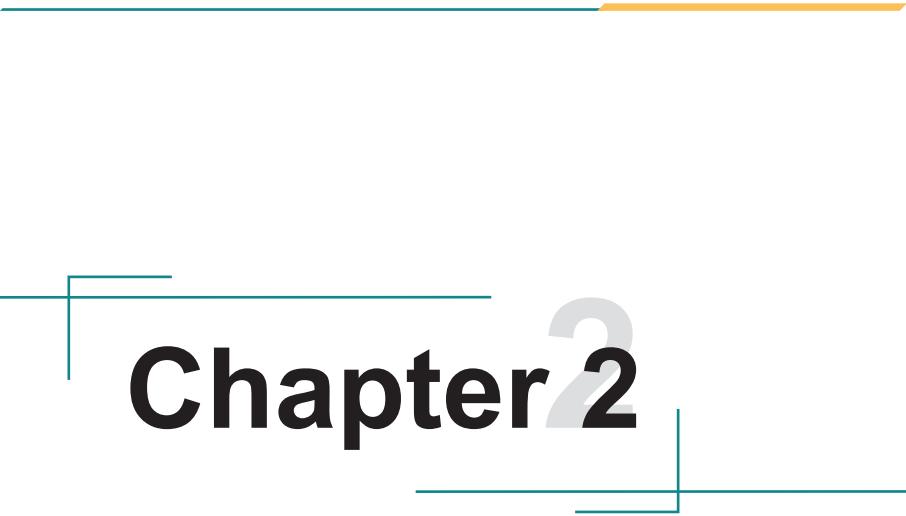


Chapter 2

Getting Started

2.1. Dimensions

The following illustration shows the dimensions of the computer, with the measurements in width, depth, and height called out.

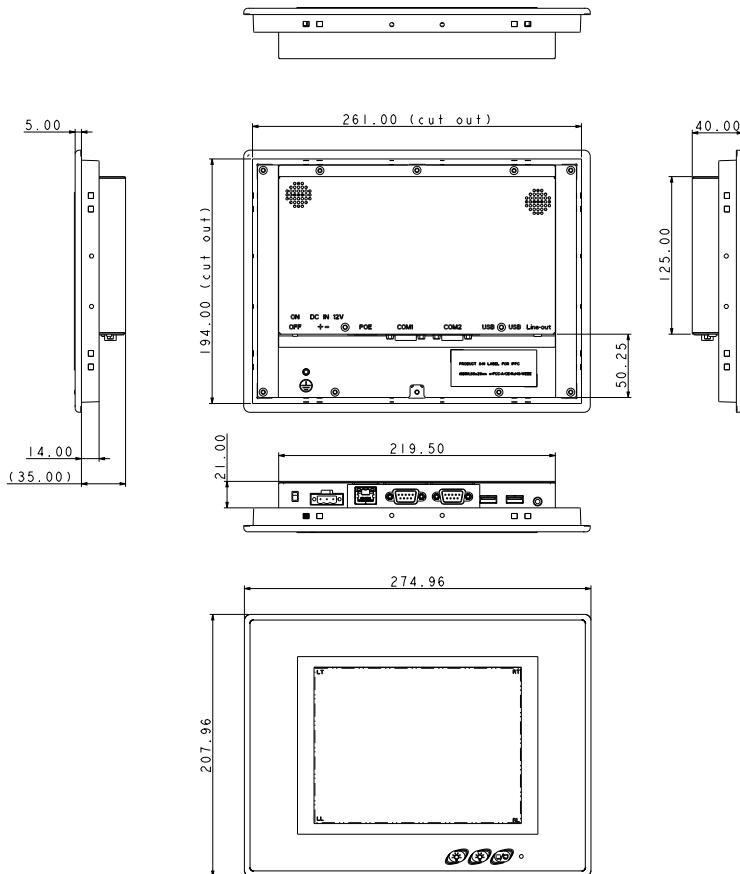

2.2. Tour the Computer

Take a look around the computer and find the external controls and connectors.

2.2.1. Front View


On the front side of the computer is a LCD display with a few function keys.



Use the function keys to launch the following actions from the computer:


Icon	Description
	Turns on/off the LCD display.
	Decreases LCD backlight.
	Increases LCD backlight.

2.2.2. Rear View

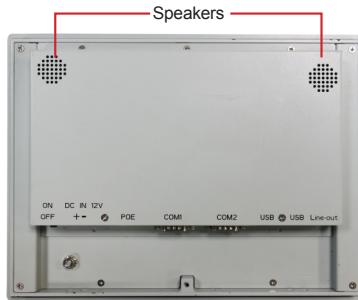

2.2.3. Bottom View

The bottom side of the computer is where the computer's I/O ports are.

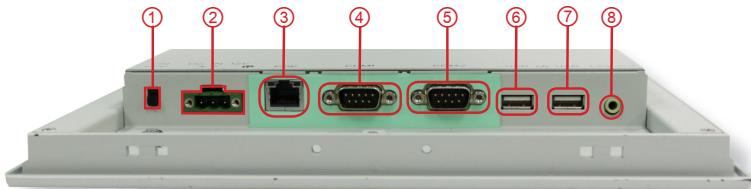

No.	Description
①	Power switch
②	DC-IN
③	LAN POE port
④	COM1
⑤	COM2
⑥	USB Port
⑦	USB Port
⑧	Line-out

2.3. Driver Installation Note

The computer supports the operating systems Windows 7. Find the necessary device drivers on the CD that comes with your purchase. Always follow the sequence below to install all drivers to prevent errors:


Chipset→Graphics→Audio→LAN→touch

Windows 7

Device	Driver Path
Chipset	\Win7_x86\infinst_autol
Framework 3.5	\.NET Framework 3.5
Graphics	\VGA\Win7\SETUP
Audio	\Audio ALC662\Vista_Win7_Win8_R270
LAN	\LAN\Win7\PROWin32
touch*	\Touch\PenMount Windows Universal Driver V2.4.2.325(WHQL)\SETUP

*Note: Refer to [Appendix A: PenMount Utilities on page 54](#) for how to use touch panel.

This page is intentionally left blank.

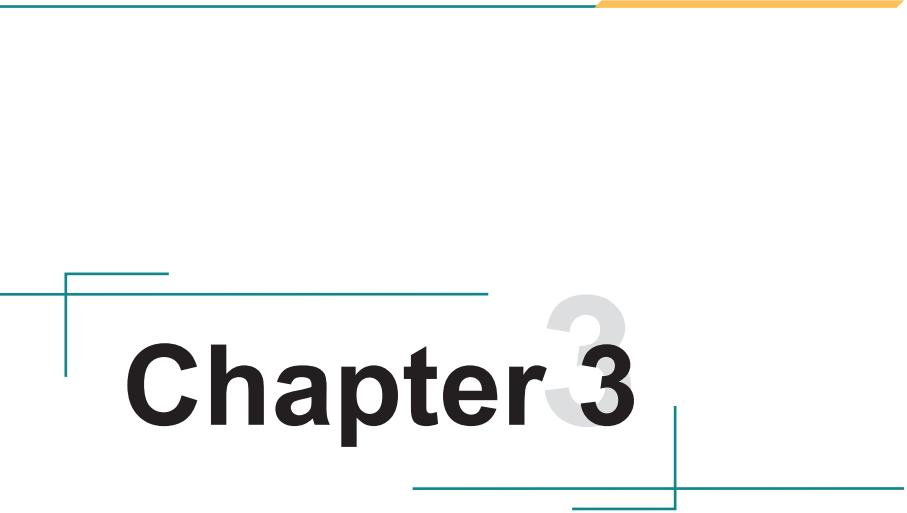

Chapter 3


Engine of the Computer

3.1. Board Layout


The engine of the computer is constructed by the CPU module EmQ-i2506, the carrier board PBQ-900F.

3.1.1. CPU Module (EmQ-i2506)


Top View

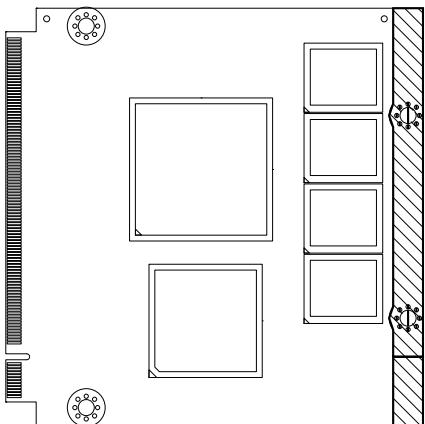

Bottom View

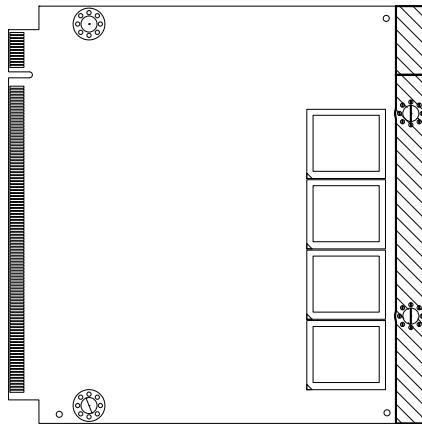

3.1.3. Carrier Board (PBQ-900F)

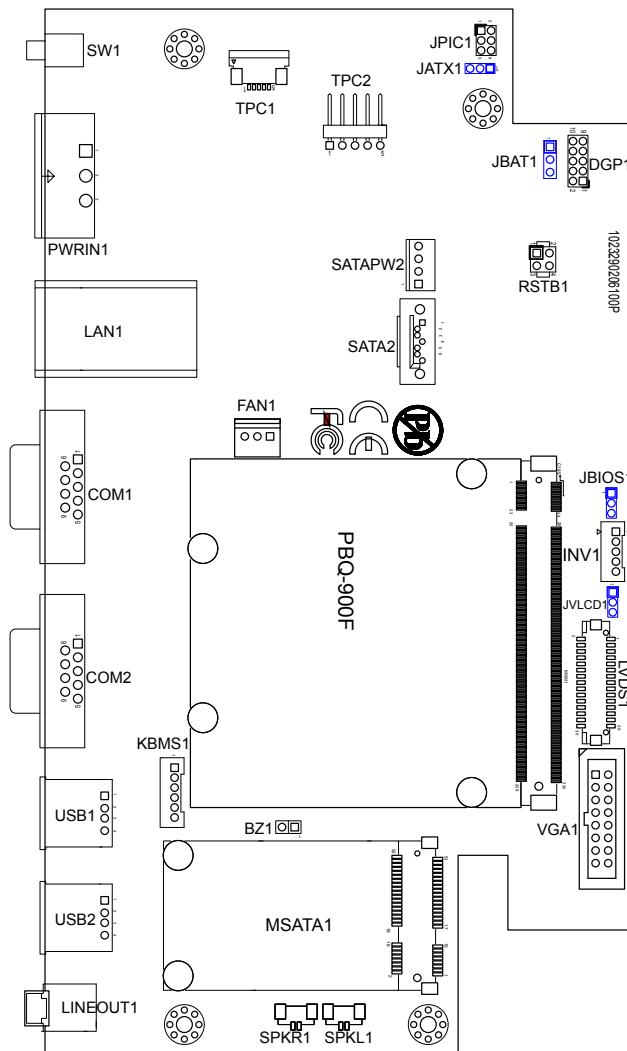

3.2. Jumpers and Connectors


This chapter will explicate each of the jumpers and connectors on the carrier board of the computer.

3.2.1. Jumpers

JATX1


Function: power supply mode setting

Jumper Type: 2.00mm-pitch 1x3-pin header



Setting:


Pin	Description	Setting
1-2	AT(default)	
2-3	ATX	

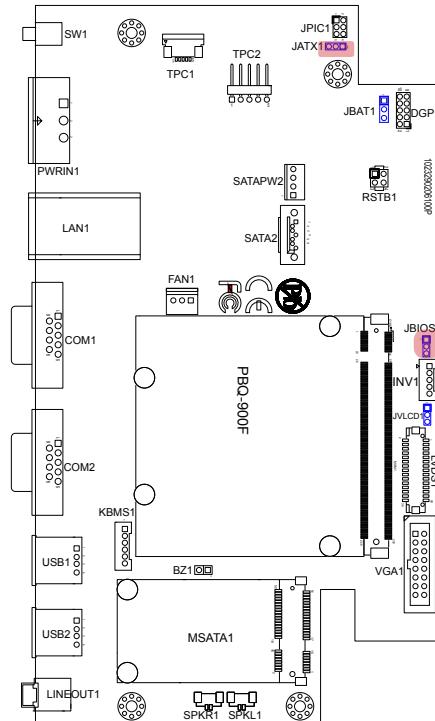

JBIOS1

Function: BIOS selector

Jumper Type: 2.00mm-pitch 1x3-pin open type jumper




Setting:


Pin	Description	Setting
1-2	Boot up from carrier board	
2-3	Boot up from module board (default)	


JBAT1

Function: COMS setting
Jumper Type: 2.54mm-pitch 1x3-pin header



Setting:

Pin	Description	Setting
1-2	keep CMOS (default)	
2-3	clear CMOS	

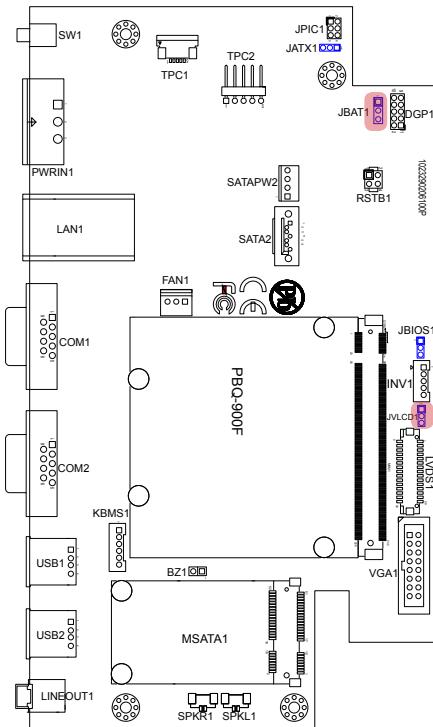


JVLCD1

Function: LCD power selection
Jumper Type: 2.00mm-pitch 1x3-pin header



Setting:


Pin	Description	Setting
1-2	VCC3	
2-3	VCC5 (default)	

3.2.2. Connectors

JPIC1


Function: PIC MCU update port

Connector Type: 2.00mm-pitch 2x3-pin header



Setting:


Pin	Description	Pin	Description
1	PIC_TX	2	Clock
3	Data	4	GND
5	5V	6	Reset

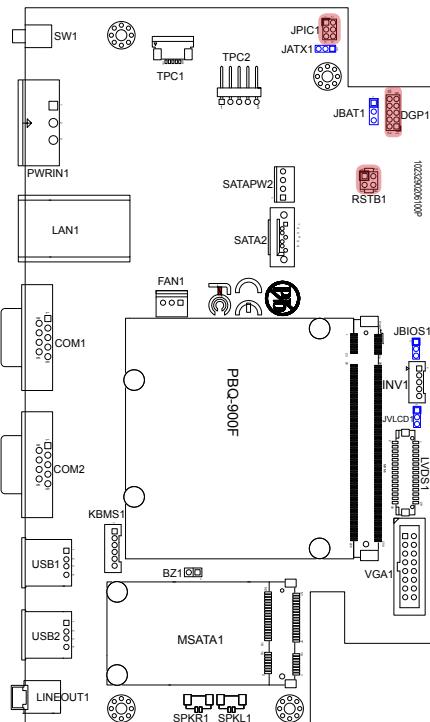

DGP1

Function: External 80 Port Pin Header

Connector Type: onboard 2.0mm pitch 10-pin header



Setting:

Pin	Description	Pin	Description
1	CLK	2	GND
3	FRAME#	4	LAD0
5	PLTRST#	6	NC
7	LAD3	8	LAD2
9	VCC3	10	LAD1

RSTB1

Function: Reset Button pin header

Connector Type: 2.54mm-pitch 4-pin header



Setting:

Pin	Description	Pin	Description
1	SYS_RESET#	2	GND
3	PWR_IN_SW#	4	GND

PWRIN1


Function: Power input

Connector Type: 5.0mm

pitch 3-pin terminal block

Setting:

Pin	Description
1	VIN+
2	VIN-
3	GND

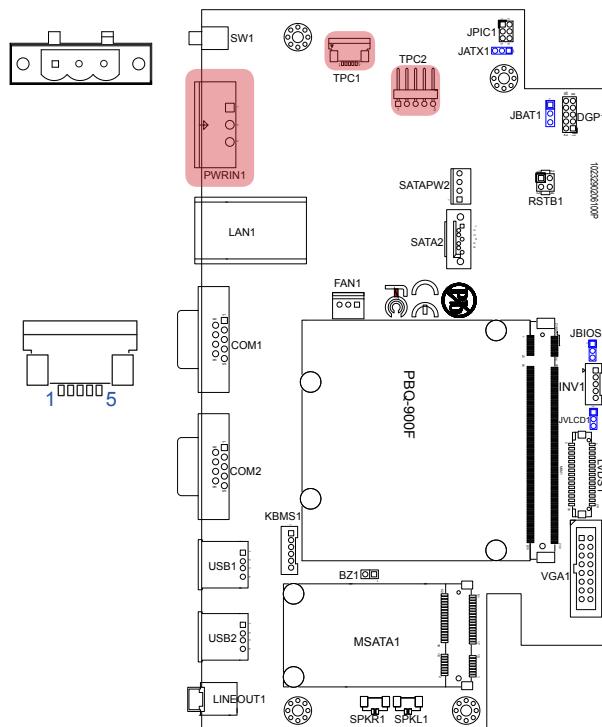

TPC1



Function: Membrane connector

Connector Type: 1.00mm-pitch

1x5-pin FPC downside connector

Setting:

Pin	Description
1	Panel-PWM-
2	Panel-PWM+
3	Power SW
4	Power LED
5	GND



TPC2

Function: Touch panel connector

Connector Type: 2.54mm-pitch 1x5-pin header


Setting:

Pin	Description
1	LCD_Y+
2	LCD_X+
3	SENSE
4	LCD_Y-
5	LCD_X-

Engine of the Computer

LAN1

Function: RJ-45 Ethernet connectors



Connector Type:


10/100/1000Mbps Fast Ethernet

Setting:

Pin	Description	Pin	Description
1	MDI0	5	MDI2
2	MDI0#	6	MDI2#
3	MDI1	7	MDI3
4	MDI1#	8	MDI3#

SATA2

Function: Serial ATA connectors



Pin	Description	Pin	Description
1	GND	2	TX+
3	TX-	4	GND
5	RX-	6	RX+
7	GND		

SATAPW2

Function:

SATA power connector

Connector Type:

2.00mm pitch 1x4-pin wafer connector



Pin **Description**

1	5V
2	GND
3	GND
4	12V

FAN1

Function:

Fan power connector


Connector Type:

2.54mm pitch 1x3-pin wafer connector



Pin **Description**


1	GND
2	+12V
3	N/C

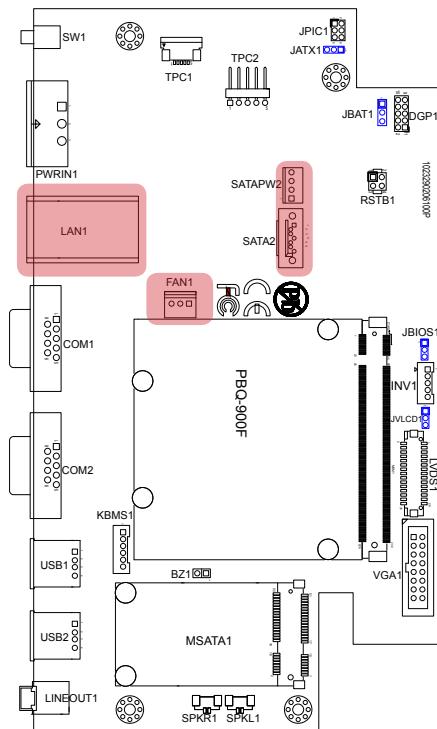

COM1&2

Function: Serial port connector

Connector Type: External 9-pin D-sub connector



Pin	Description	Pin	Description
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND		

USB1&2

Function: USB2.0 ports

Connector Type: USB2.0 type A connector

Setting:

Pin	Description
1	5V
2	USB D-
3	USB D+
4	GND




KBMS1

Function: The KB and Mouse connector

Connector Type: 2.0mm pitch 1x6-pin header



Pin	Description
1	KB_DATA
2	GND
3	MS_DATA
4	KB_CLK
5	PS2_VCC
6	MS_CLK

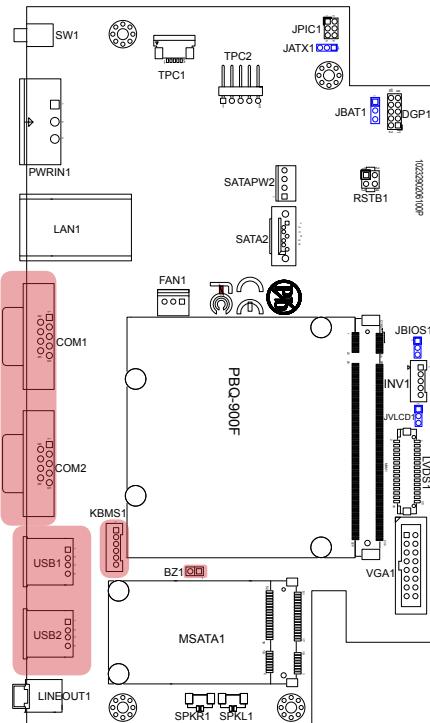

Engine of the Computer

BZ1

Function: Buzzer pin header
Jumper Type: 2.54mm pitch 2-pin header





Pin Description

1	VCC5
2	GND

MSATA1

Function: PCI Express MiniCard socket
Connector Type: onboard 0.8mm pitch 52-pin edge card connector

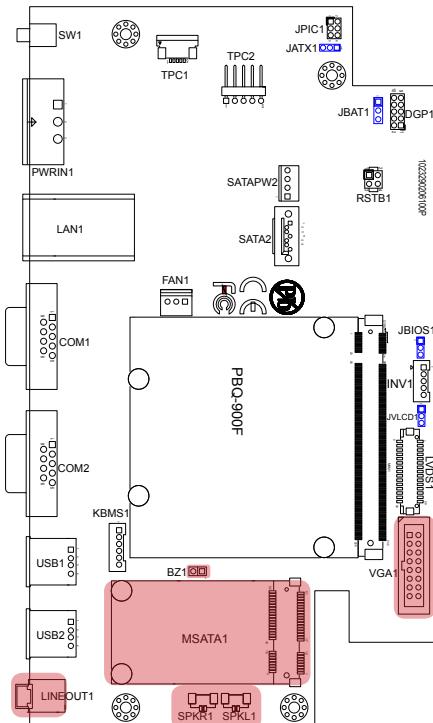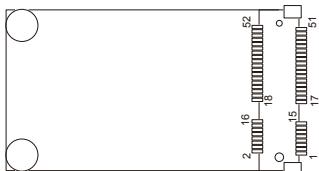

SPKL1 or SPKR1

Function: left or right speaker connector



VGA1

Function: Analog RGB
Connector
Connector Type: 2.00mm pitch 2x8-pin box headers



Pin	Description	Pin	Description
1	RED	2	GREEN
3	BLUE	4	N/C
5	GND	6	GND
7	GND	8	GND
9	VCC5	10	GND
11	N/C	12	VDDAT
13	HSYNC	14	VSYNC
15	VDCLK	16	N/C


LVDS1

Function: LCD connector
Connector Type: DF-13-30DP-1.25V connector



Setting:

Pin	Description	Pin	Description
1	VCC_LCD	2	VCC_LCD
3	TXLC+	4	TXUC+
5	TXLC-	6	TXUC-
7	GND	8	GND
9	TXL0+	10	TXU0+
11	TXL0-	12	TXU0-
13	GND	14	GND
15	TXL1+	16	TXU1+
17	TXL1-	18	TXU1-
19	GND	20	GND
21	TXL2+	22	TXU2+
23	TXL2-	24	TXU2-
25	GND	26	GND
27	TXL3+	28	TXU3+
29	TXL3-	30	TXU3-

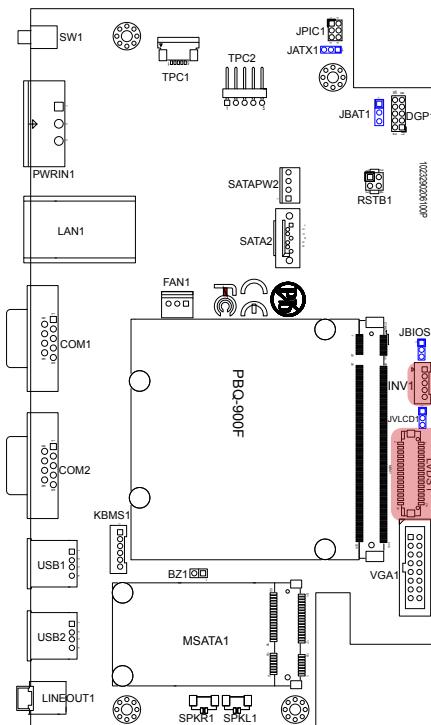

CN19(INV)1


Function: inverter connector
Connector Type: 2.00mm-pitch 1x5-pin 4-wall wafer connector

Setting:



Pin	Description
1	VCC_INV
2	GND
3	BKLEN
4	BKLTCTL
5	GND

This page is intentionally left blank.

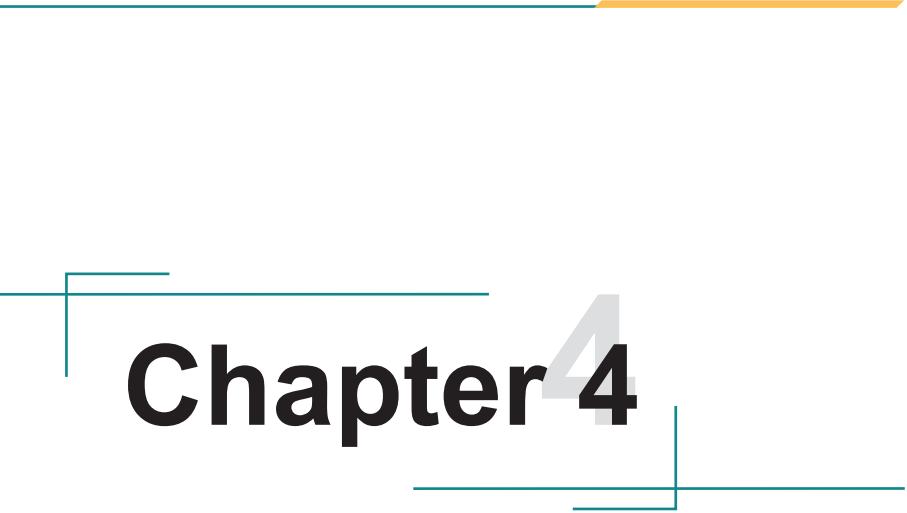


Chapter 4

Installation & Maintenance

4.1. Use Onboard Jumpers and Connectors


The computer's carrier board PBQ-900F comes with some connectors to join some devices and also some jumpers to alter hardware configuration. Follow through the guide below to access these components inside the computer.

1. Loosen and remove the 5 screws from the computer's rear panel.

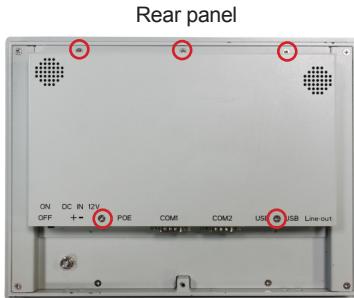

Remove the marked screws.

2. Dismount the rear cover from the computer. The inside of the computer comes to view.

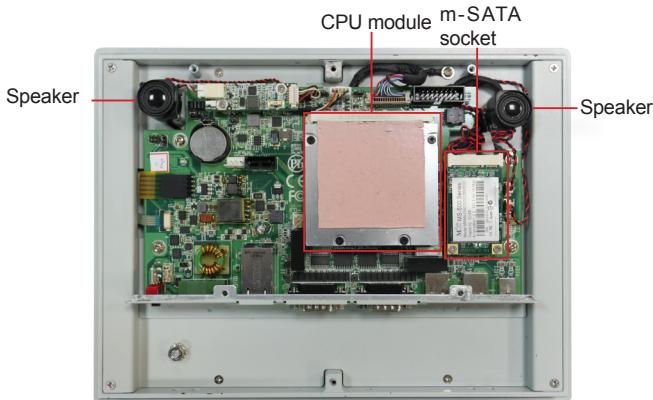


3. Adjust the jumpers or use the connectors on the carrier board as described in [3.2.1. Jumpers](#) on page [16](#) and [3.2.2. Connectors](#) on page [18](#).

4.2. Install Hardware

The following sections will guide you through the basic hardware installation for the computer. Remember to turn off the panel PC before installing/removing inner hardware.

4.2.1. Install SSD

The computer supports a mSATA SSD to work inside the computer. To install a mSATA SSD to the computer, Insert a mSATA SSD storage device to the slot. Fix them together by using 2 screws. See the illustration below.

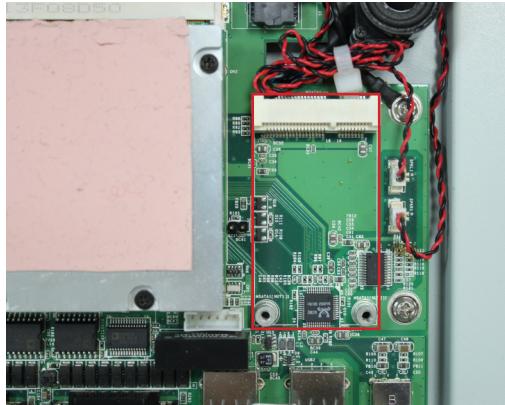


4.3. Mount the Computer

Integrate the computer to where it works by mounting it to a wall in the surroundings or to the rear of a display monitor. Similarly, the subsequent illustrations only take LYNC-715 for instance.

4.3.1. Panel Mounting

1. Have the panel-mounting clamps included in accessory pack. Put the clamps into holes around edges of the panel PC as below.

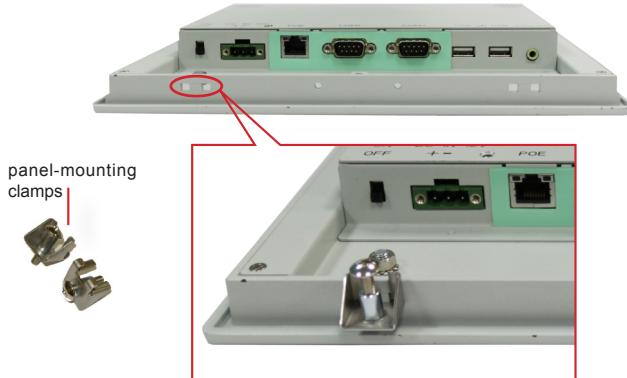

4.3.2. VESA Mounting

To support VESA-mounting, the computer needs a VESA bracket, which is available in [1.5.2. Configure-to-Order Service](#) on page [6](#), to enable 75 x 75mm and 100 x 100mm VESA applications.

4.3.2.1. Install VESA Bracket

Follow the guide below to install the VESA bracket to the computer:

1. Have the VESA-mount bracket, VMB-715 in this case, and the four mounting screws that come with it.



2. Place the computer on a flat surface, with the rear facing up.



3. Place the VESA bracket onto the computer.



4. Fix the VESA bracket to the computer by two screws at each the left and right side of the computer.




Use another two screws on the both side.


4.3.2.2. Use VESA Arm

To integrate the computer to a VESA arm:

1. Install the VESA-mount bracket to the computer as described in previous section.
2. Find the VESA mounting holes on the bracket.

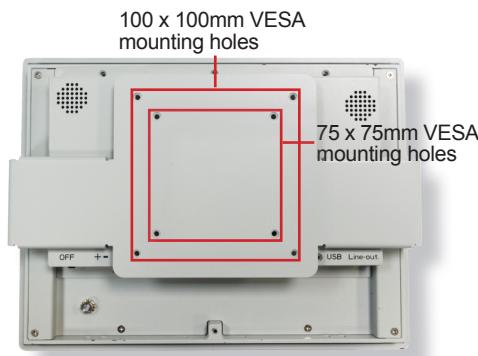

3. Attach the VESA arm to the rear of the computer by meeting the mounting holes on the VESA arm and VESA bracket.
4. Fix the assemblage with four screws.

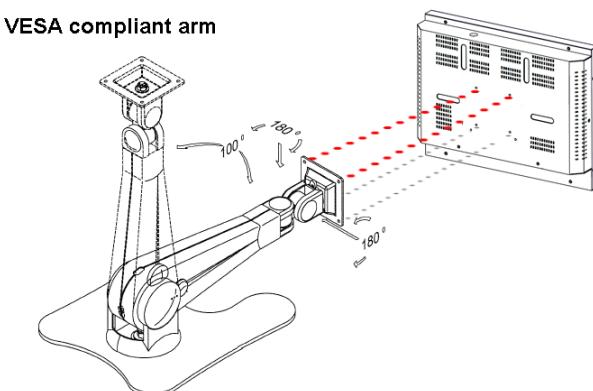


4.4. Wire DC-Input Power Source




Warning Only trained and qualified personnel are allowed to install or replace this equipment.


Follow the instructions below to connect the computer to a DC-input power source:

1. Before wiring, make sure the power source is disconnected.
2. Find the terminal block in the accessory box.
3. Use the wire-stripping tool to strip a short insulation segment from the output wires of the DC power source.
4. Identify the positive and negative feed positions for the terminal block connection.
5. Insert the exposed wires into the terminal block plugs. Only wires with insulation should extend from the terminal block plugs. Note that the polarities between the wires and the terminal block plugs must be positive to positive and negative to negative.
6. Use a slotted screwdriver to tighten the captive screws. Plug the terminal block firmly, which wired, into the receptacle on the rear panel.

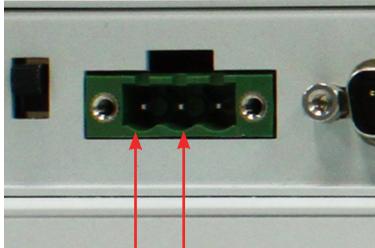

+ **-**

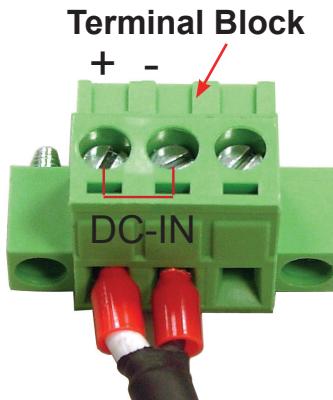

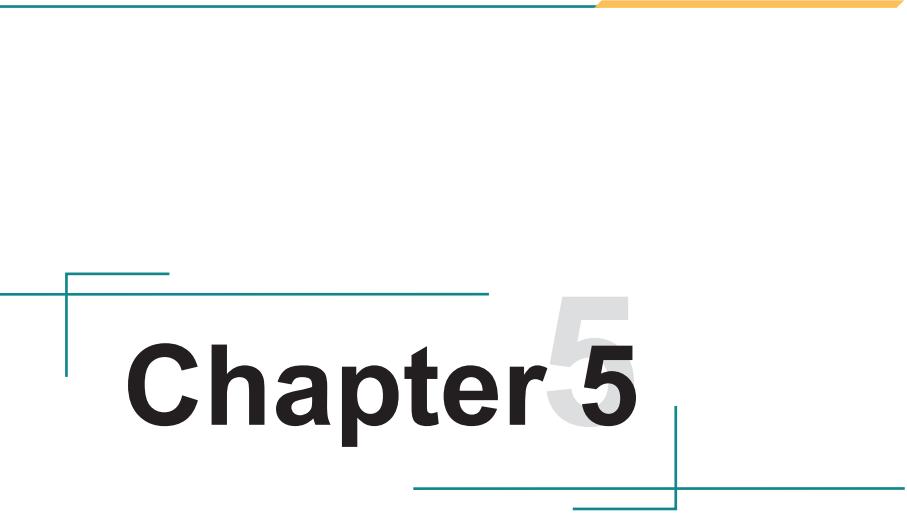


Chapter 5

BIOS

BIOS

The BIOS Setup utility for the computer is featured by American Megatrends, Inc. to configure the system settings stored in the system's BIOS ROM. The BIOS is activated once the computer powers on.

To enter the BIOS Setup utility, continuously hit the “Delete” key upon powering on the computer.

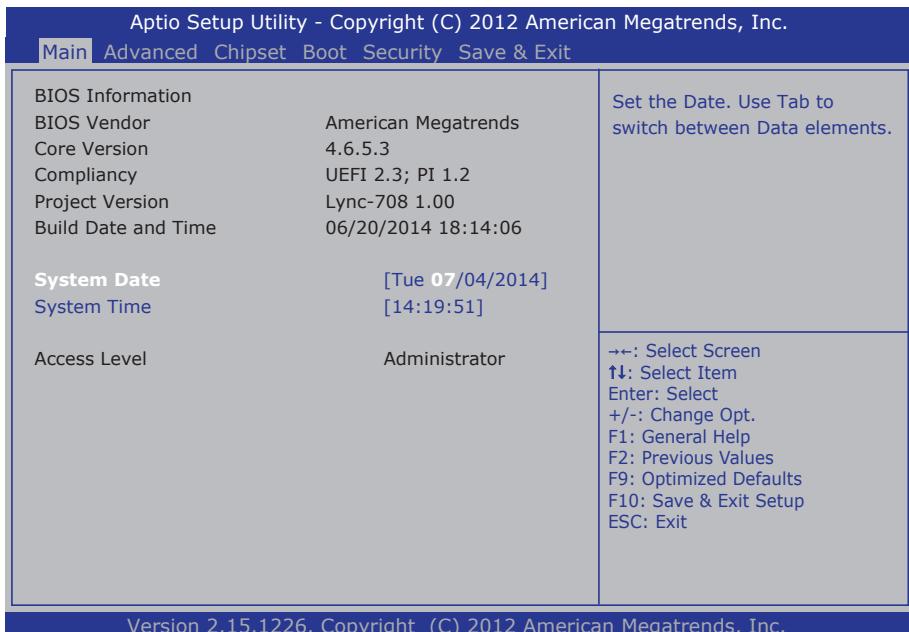

The featured menus are:

Menu	Description
Main	See 5.1. Main on page 36 .
Advanced	See 5.2. Advanced on page 37 .
Chipset	See 5.3. Chipset on page 47 .
Boot	See 5.4. Boot on page 50 .
Security	See 5.5. Security on page 51 .
Save & Exit	See 5.6. Save & Exit on page 52 .

Key Commands


The BIOS Setup utility relies on a keyboard to receive user's instructions. Hit the following keys to navigate within the utility and use the utility.

Keystroke	Function
← →	Moves left/right between the top menus.
↓ ↑	Moves up/down between highlight items.
Enter	Selects an highlighted item/field.
ESC	<ul style="list-style-type: none"> ▶ On the top menus Hit ESC to quit the utility without saving changes to CMOS. (The screen will prompt a message asking you to select OK or Cancel to return to the BIOS settings.) ▶ On the submenus Hit ESC to quit current screen and return to the top menu.
Page Up / +	Increases current value to the next higher value or switches between available options.
Page Down / -	Decreases current value to the next lower value or switches between available options.
F1	Opens the Help of the BIOS Setup utility.
F2	Loads previous values.
F9	Loads optimized default values..
F10	Exits the utility and saves the changes that have been made. (The screen then prompts a message asking you to select Yes or No to exit and save changes.)
<K>	Scroll help area upwards.
<M>	Scroll help area downwards.

Note: Pay attention to the “WARNING” that shows at the left pane onscreen when making any change to the BIOS settings.

5.1. Main


The **Main** menu features the settings of **System Date** and **System Time** and displays some BIOS info.

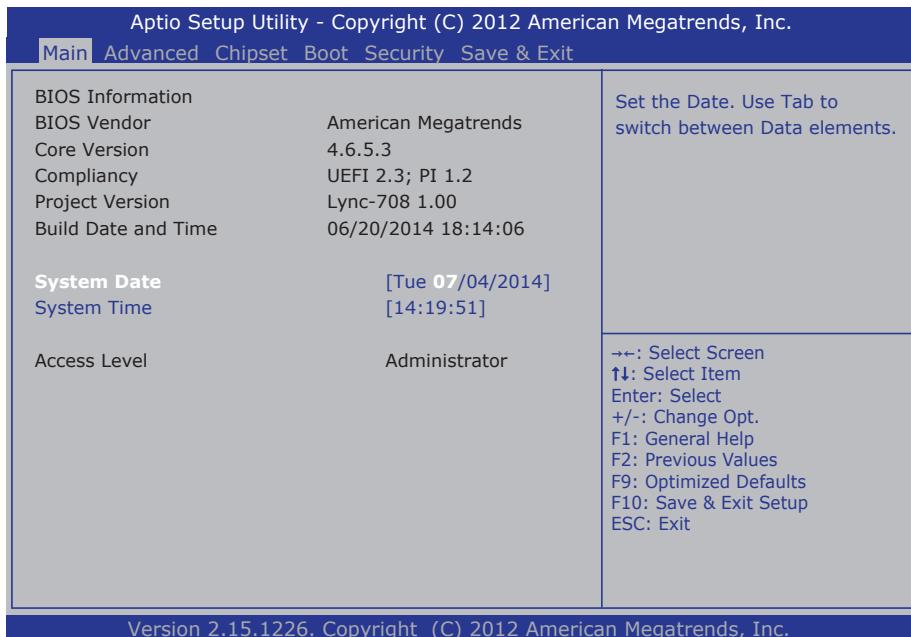

Info	Description
BIOS Information	Delivers the computer's BIOS information, including BIOS vendor, core version, compliancy, project version and build date and time.
System Date	Set the system date. Note that the 'Day' automatically changes when you set the date. ► The date format is: Day : Sun to Sat Month : 1 to 12 Date : 1 to 31 Year : 1998 to 2099
System Time	Set the system time. ► The time format is: Hour : 00 to 23 Minute : 00 to 59 Second : 00 to 59
Access Level	Delivers the level by which the BIOS Setup utility is being accessed at the moment. ► Only Administrator level is available on the computer.

5.2. Advanced


The **Advanced** menu configures the system's ACPI, CPU, IDE, USB and Super IO.

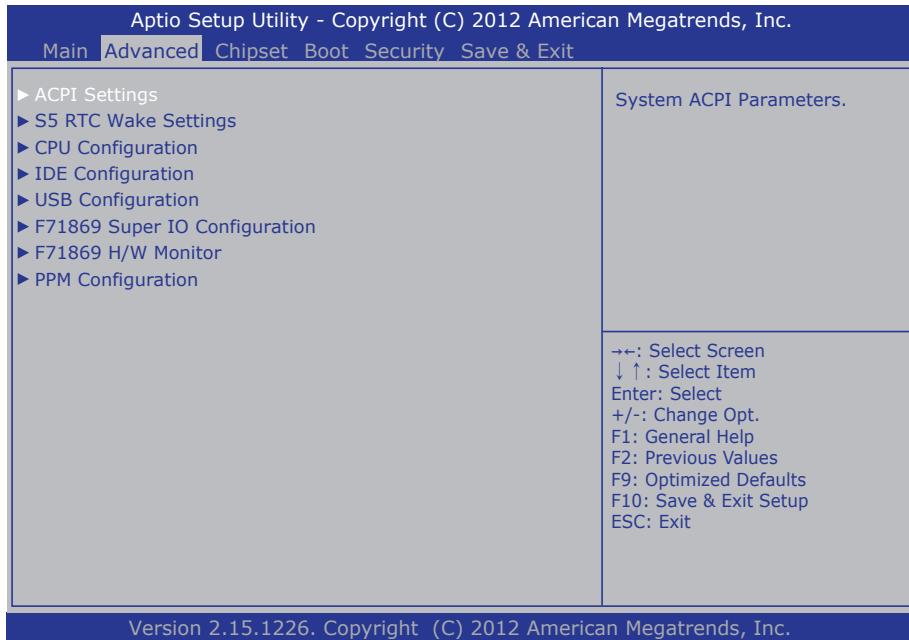

Setting	Description
ACPI Settings	See 5.2.1. ACPI Settings on page 38 .
S5 RTC Wake Settings	See 5.2.2. S5 RTC Wake Settings on page 39 .
CPU Configuration	See 5.2.3. CPU Configuration on page 40 .
IDE Configuration	See 5.2.4. IDE Configuration on page 41 .
USB Configuration	See 5.2.5. USB Configuration on page 42 .
F71869 Super IO Configuration	See 5.2.6. F71869 Super IO Configuration on page 44 .
F71869 H/W Monitor	See 5.2.7. F71869 H/W Monitor on page 45 .
PPM Configuration	See 5.2.8. PPM Configuration on page 46 .

5.2.1. ACPI Settings

ACPI Settings display the system's ACPI (Advanced Configuration and Power Interface). The featured settings are:

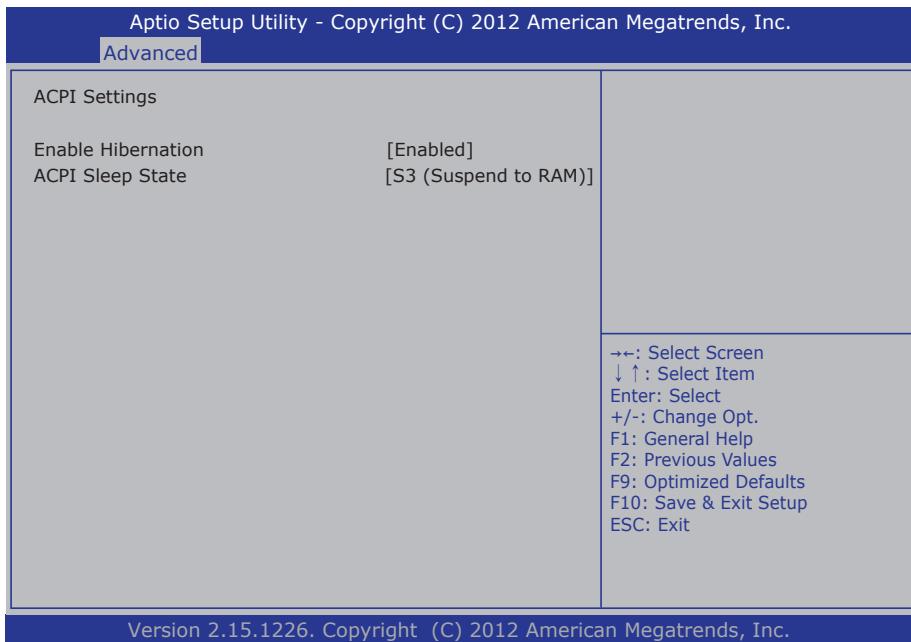

5.2.2. S5 RTC Wake Settings

This submenu configures how the system wakes up from S5 by RTC alarm.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced


Wake System with Fixe	[Disabled]	Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified
Wake System with Dyna	[Disabled]	
		→←: Select Screen ↓ ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit Setup ESC: Exit

Version 2.15.1226. Copyright (C) 2012 American Megatrends, Inc.

Setting	Description
Wake system with Fixe	Enables or Disables system wake-up on specified time. ▶ Options: Disabled (default), Enabled ▶ When enabled, system will wake up on the time specified. The time format is: Hour : 00 to 23 Minute : 00 to 59 Second : 00 to 59
Wake system with Dyna	Enables or Disables system wake-up on specified time increment. ▶ Options: Disabled (default), Enabled ▶ When enabled, system will wake up on current time + increase minute (1 to 5) sepcified.


5.2.3. CPU Configuration

This submenu delivers the info about the CPU, including the CPU's model name, processor stepping, processor speed, microcode revision, the amount of processor cores, EMT64 support, and so on.

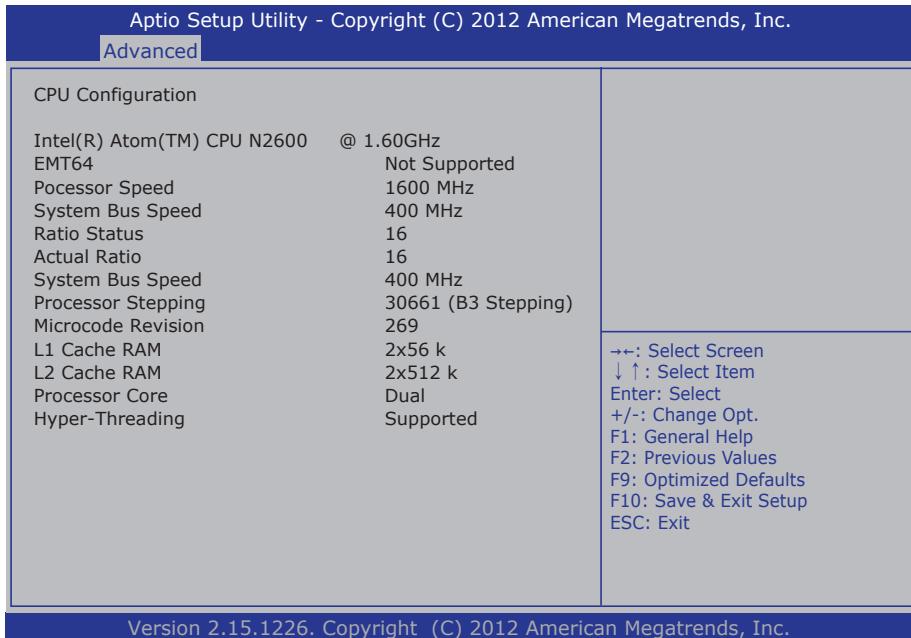

5.2.4. IDE Configuration


IDE Configuration delivers the computer's SATA status and configures SATA device(s).

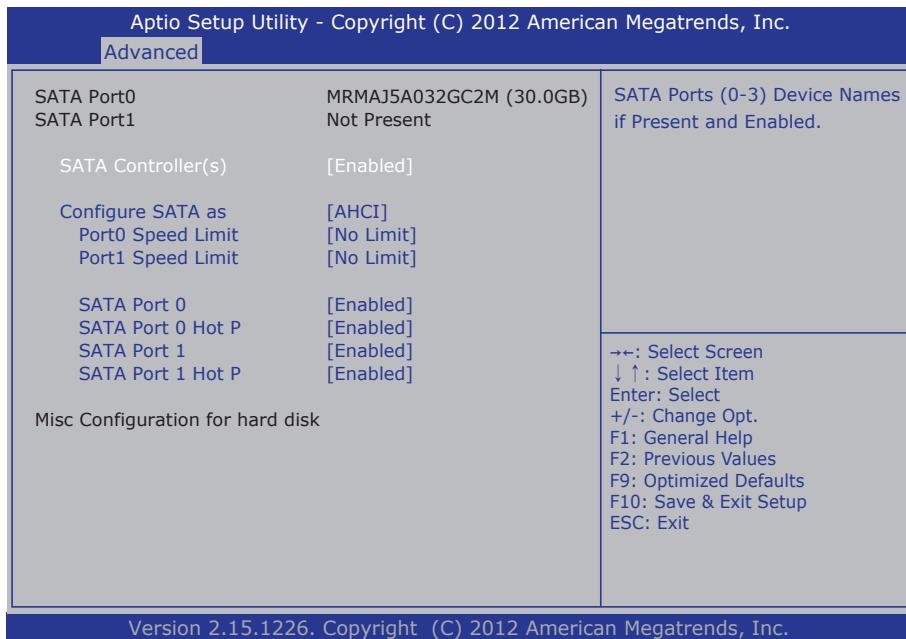

Setting	Description
SATA Controller(s)	SATA Ports (0-3) Device Names if Present and Enabled. ► Options: Disabled , Enabled (default)
Configure SATA as	Select a configuration for SATA Controller. ► Options: IDE , AHCI (default) <p>If AHCI is selected for SATA controller, the following settings will be available:</p> <ul style="list-style-type: none"> ► Port0/1 Speed Limit: Configure port 0/1 speed as No Limit (default), GEN1 Rate or GEN2 Rate. ► SATA Port 0/1: Set this item to enable or disable the SATA port. Options are Enabled (default) and Disabled. ► SATA Port 0/1 Hot P: Set this item to enable or disable hot-plugging for port 0. Options are Enabled (default) and Disabled.

5.2.5. USB Configuration

USB Configuration displays the status of USB connection and configures USB parameters.

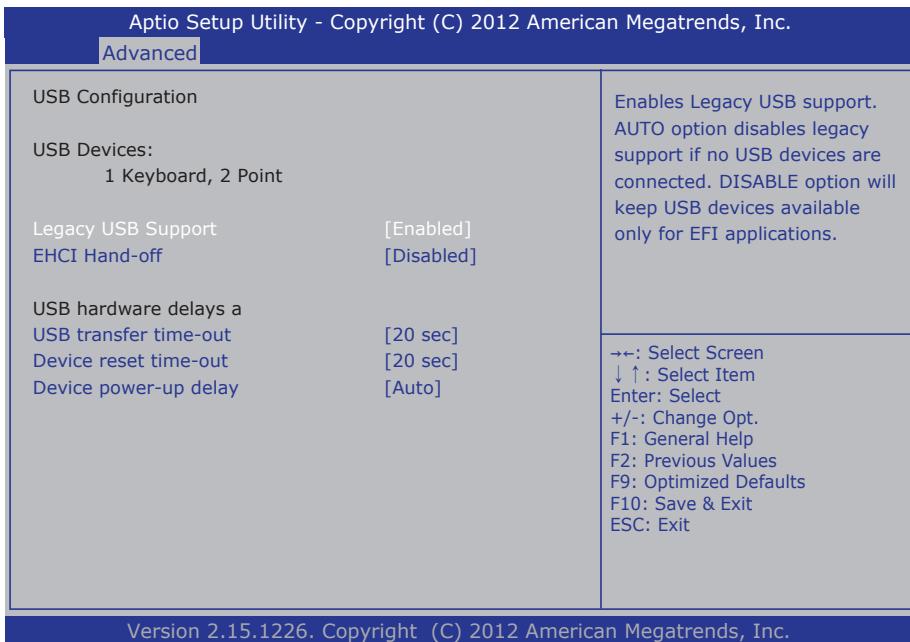


Version 2.15.1226. Copyright (C) 2012 American Megatrends, Inc.

Setting	Description
Legacy USB Support	Enabled (default) Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
EHCI Hand-off	This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver. ► Options: Disabled (default), Enabled
USB transfer time-out	Configures the USB transfer timeout value for control, bulk and interrupt transfers. ► Options: 20 sec (default), 10 sec , 5 sec and 1 sec .
Device reset time-out	Configures the timeout value for the USB mass storage device Start Unit command. ► Options: 40 sec , 30 sec , 20 sec (default) and 10 sec .

Device power-up delay	Configures the maximum time allowed for device to report itself to the Host Controller, . ▶ Options: Auto (default): Root port devices will be given 100 ms; a hub port device will be given the time as specified in the hub descriptor, Manual: If set to Manual, a delay from 1 to 40 seconds can be selected. The default is 5 seconds.
-----------------------	--

5.2.6. F71869 Super IO Configuration


This submenu configures the computer's Super IO chip, Fintek F71869, for the serial port 0~1.

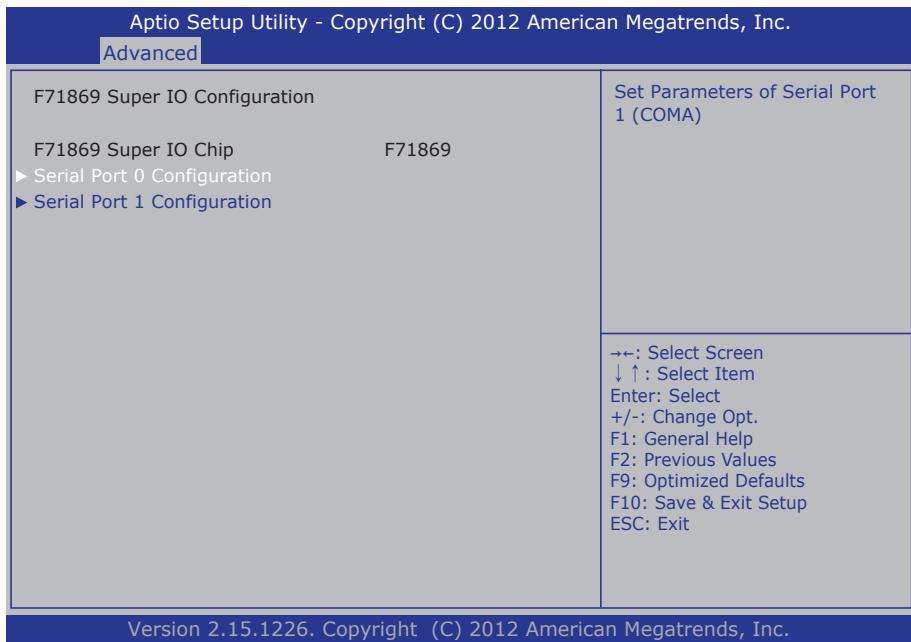

Submenu / Setting	Description	
	Setting	Description
Serial Port 0 Configuration	Serial Port	Enable (default) or Disable Serial Port (COM)
Serial Port 1 Configuration	Setting	Description
	Serial Port	Enable (default) or Disable Serial Port (COM)

5.2.7. F71869 H/W Monitor

H/W Monitor monitors the CPU board's hardware status. Select **H/W Monitor** to run a report of the info including CPU/system temperatures and other voltage info.

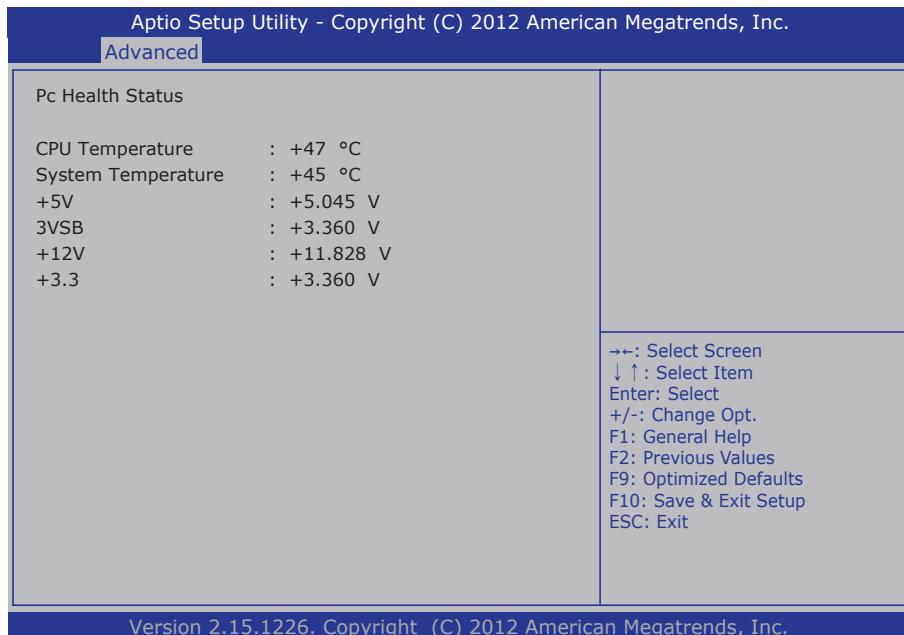

5.2.8. PPM Configuration

This submenu configures the CPU PPM and speed step.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

PPM Configuration

EIST

[Enabled]

CPU C State Report

[Disabled]

Enable/Disable Intel SpeedStep


→←: Select Screen
↓↑: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit Setup
ESC: Exit

Version 2.14.1219. Copyright (C) 2012 American Megatrends, Inc.

Setting	Description
EIST	Enables (default) or Disable Intel Speed Step.

5.3. Chipset

Use this **Chipset** menu to control the system's chipset features.

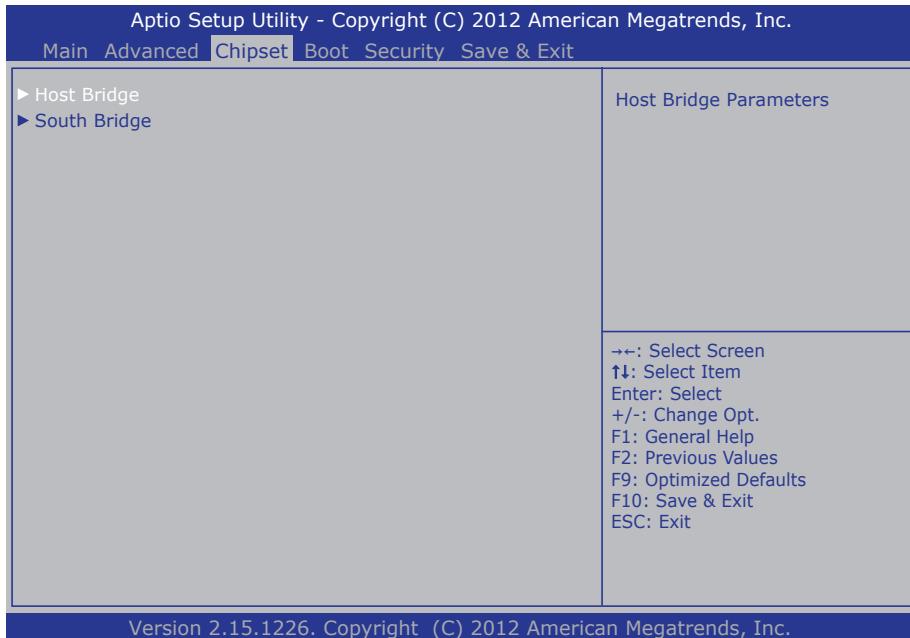

Submenu	Description
Host Bridge	Configures the system's north bridge. ► See 5.3.1. Host Bridge on page 48 .
South Bridge	Configures the system's south bridge. ► See 5.3.2. South Bridge on page 49 .

5.3.1. Host Bridge


This submenu shows the memory information such as memory frequency, total memory and the memory module(s) presence.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Chipset

5.3.2. South Bridge


The submenu **South Bridge** configures the south bridge features:

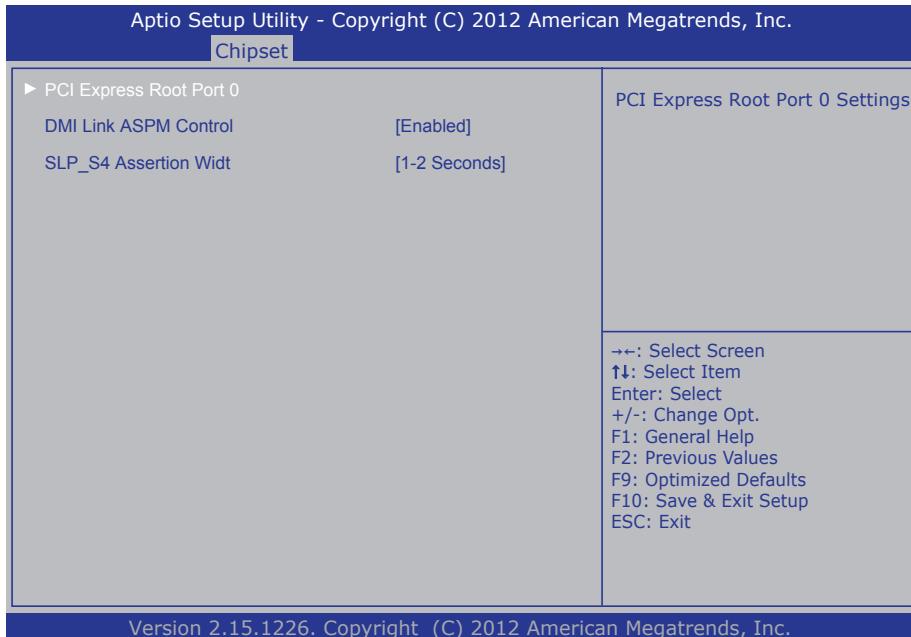

Setting	Description
DMI Link ASPM Control	Enable (default) or Disable the control of Active State Power Management on both North Bridge and South Bridge side of the DMI ((Desktop Management Interface).
SLP_S4 Assertion Widt	Select a minimum assertion width of the SLP_S4# signal <ul style="list-style-type: none"> ▶ Options: <ul style="list-style-type: none"> 1-2 Seconds (default) 2-3 Seconds 3-4 Seconds 4-5 Seconds

5.4. Boot

The **Boot** menu configures how to boot up the system by defining boot device priority.

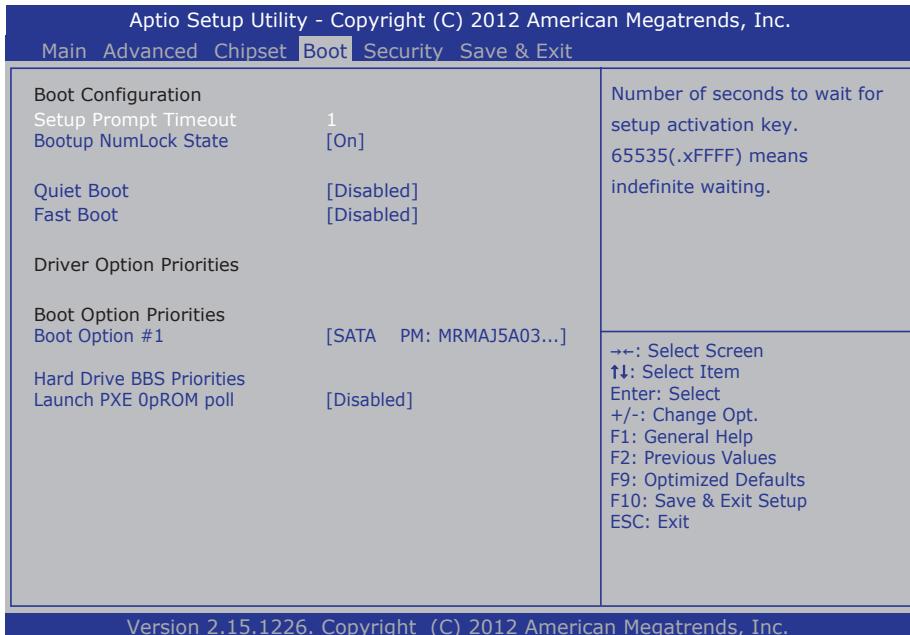

Setting	Description
Setup Prompt Timeout	Configures the seconds allowed to stay in BIOS setup prompt screen. ► Options: 1 (default) and ???
Bootup NumLock State	Select the keyboard NumLock state ► Options: On (default) and Off
Quiet Boot	Enables or disables (default) Quiet Boot option
Fast Boot	Enables or disables (default) boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
Boot Option #1	Set the system boot order. Enables or disables (default) boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
Launch PXE OpROM poli	Enables or disables (default) the execution of UEFI and legacy PXE OpROM.

5.5. Security

The **Security** menu sets up an administrator password to limit the access to the BIOS Setup utility. Users will be asked for such password each time he/she tries to access the BIOS Setup utility.


Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.		
Main	Advanced	Chipset
Password Description		Set Administrator Password
If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup. If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights. The password must be in the following range:	3 20	
Administrator Password		→←: Select Screen ↑↓: Select Item Enter: Select +/−: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit Setup ESC: Exit
HDD Security Configuration HDD0: MRMAJ5A032GC	3	
System Mode state Secure Boot state	Setup Disabled	

Version 2.14.1219. Copyright (C) 2012 American Megatrends, Inc.

Setting	Description
Administrator Password	<p>Sets up an administrator password. To set up an administrator password:</p> <ol style="list-style-type: none"> 1. Select Administrator Password. An Create New Password dialog then opens on screen. 2. Enter your desired password that is no less than 3 characters and no more than 20 characters 3. Hit [Enter] key to submit. <p>► Once the administrator password is set up, this BIOS Setup utility is limited to access and will ask for the password each time any access is attempted.</p>

5.6. Save & Exit

The **Save & Exit** menu features a handful of commands to launch actions from the BIOS Setup utility regarding saving changes, quitting the utility and recovering defaults.

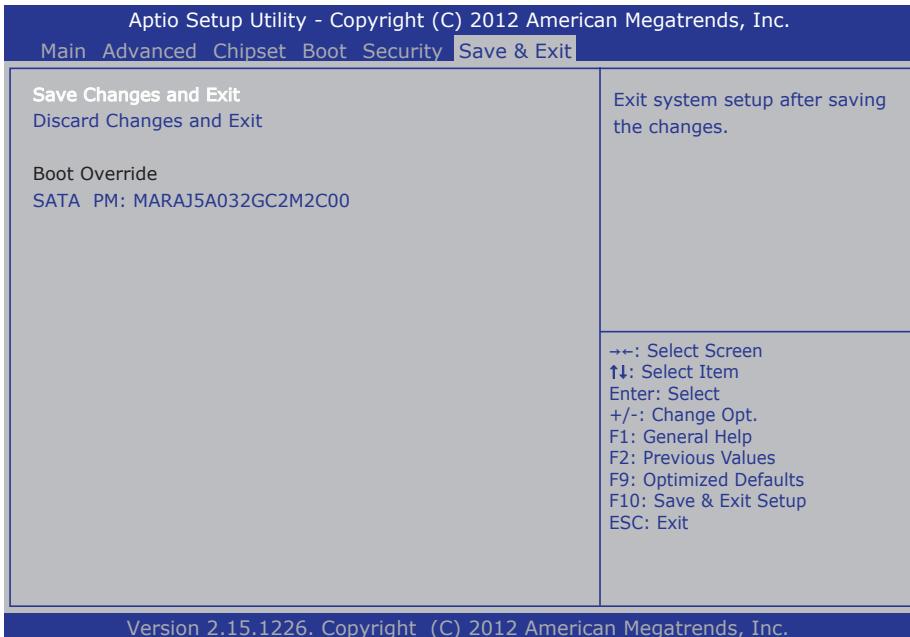

Setting	Description
Save Changes and Exit	Exit system setup after saving the changes. ▶ Enter the item and then a dialog box pops up: Save configuration and exit?
Discard Changes and Exit	Exit system setup without saving any changes. ▶ Enter the item and then a dialog box pops up: Quit without saving?
Boot Override	Override a previously defined boot device. The available Boot Options will be listed below. If selected, a dialog box pops up: Save configuration and reset?




Appendices


Appendix A: PenMount Utilities

A.1. PenMount Control Panel


After everything is installed properly, there will be a touch screen application named **PenMount Control Panel** in **All Programs**. Execute this application.

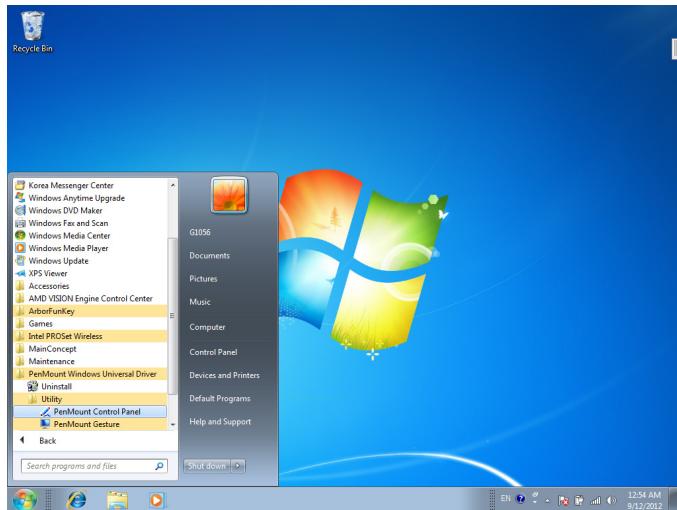

1. The program consists of 3 tabs. The left one is **Device**, in it, you can find how many devices are detected in your system. Select one device icon and tap **Configure**, or double tap the device icon for touch screen calibration.

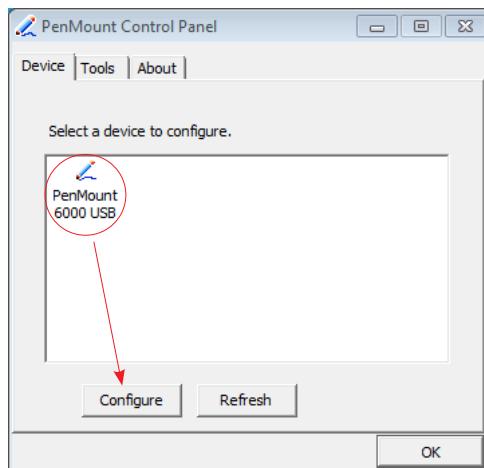

2. And then another window with **Calibrate** tab will jump out.

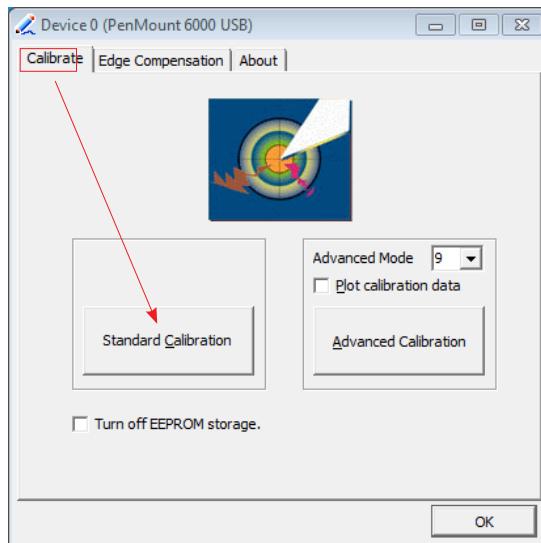

Device Calibration Dialog


a. The Calibrate Tab

This function offers two ways to calibrate your touch screen. '**Standard Calibration**' adjusts most touch screens while '**Advanced Calibration**' adjusts aging touch screens.

a.1 Standard Calibration

The Standard Calibration function lets you match the touch screen to your display so that the point you touch is accurately tracked on screen. Standard Calibration only requires four points for calibration and one point for confirmation. Under normal circumstance, Standard Calibration is all you need to perform an accurate calibration.

- i. Please tap the Standard Calibration button to start calibration procedures.
- ii. After that, the 1st crosshair will appear on white screen. Use your finger or stylus to touch the red center and hold down until the screen shows the message - "Lift off to proceed".
- iii. The 2nd crosshair follows immediately. Do the process again. After the fifth red point calibration is complete, the program will jump out automatically, or you may press ESC key to quit it during calibration process. Alternatively, doing nothing for a while equates to pressing ESC.

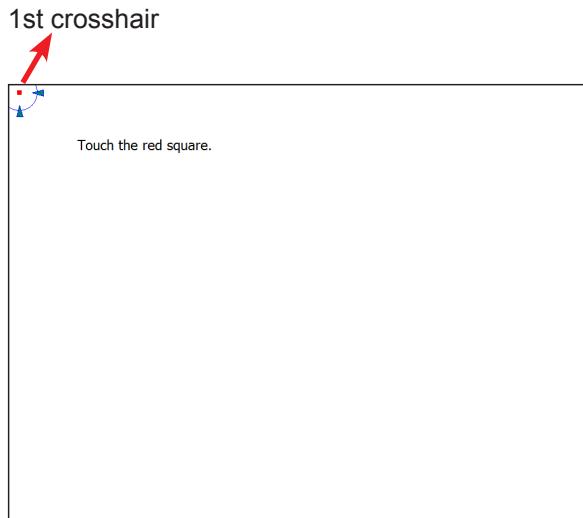

a.2 Advanced Calibration

The Advanced Calibration function improves the accuracy of calibration by using more involved engineering calculations. Use this function only if you have tried the Standard Calibration and there is still a discrepancy in the way the touch screen maps to the display. You can choose 9, 16 or 25 points to calibrate, though we suggest that you first try 9 points, if it is still not tracking well then try 16 or 25 points. The more points you use for calibration, the greater the accuracy is. Errors in calibration may occur due to viewing angle, or individual skill, and there may be little difference in using 16 or 25 points. Note that a stylus is recommended for most accurate results.


Plot Calibration Data

Check this function to have touch panel linearity comparison graph appear when you finish Advanced Calibration. The black lines reflect the ideal linearity assumed by PenMount's application program while the blue lines show the approximate linearity calculated by PenMount's application program as the result of user's execution of Advance Calibration.

Turn off EEPROM storage


Tick this function to disable the write-in of calibration data in Controller.

Please tap the Advanced Calibration button to start calibration procedures and do the rest as explained in Standard Calibration.


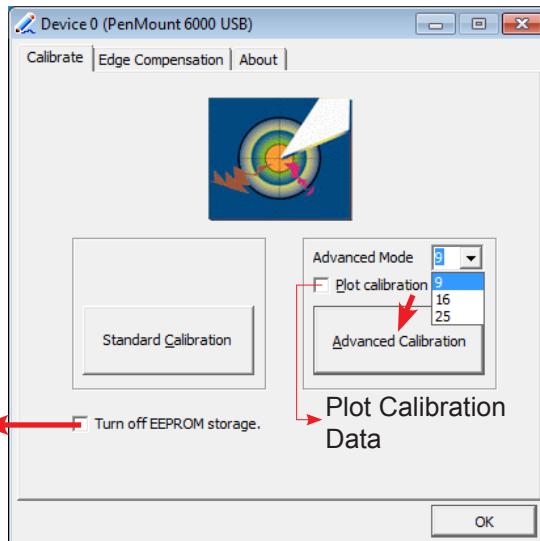


b. The Edge Compensation Tab

Under the same level where you calibrate your screen, you may find the tab. This tab is the edge compensation settings for the advanced calibration. You can adjust the settings from 0 to 30 for accommodating the difference of each touch panel.


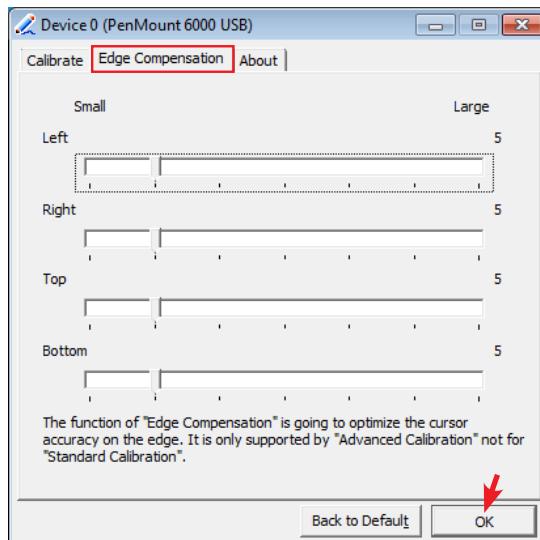


3. Press **OK** to close former window and back to upper level. As mentioned before, the program consists of 3 tabs, and the central one is **Tool**, switch to it and click **Draw** to test PenMount touch screen operation.

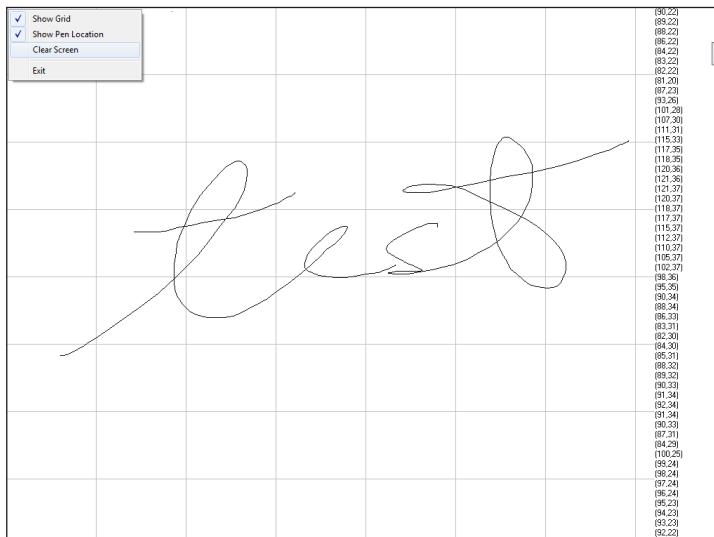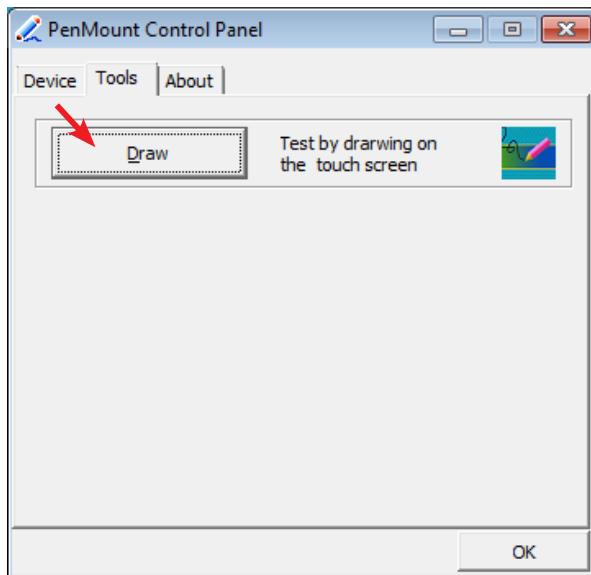


A.2. PenMount Gesture


1. Now that this tablet PC supports touchscreen function, you may take advantage of that to set hotkey or do other settings. Single-click a small icon like a monitor in system tray. If it's absent, you can recall it from **All Programs**. The default setting is inactive, so you need to click "Gesture Setting" to start the program.

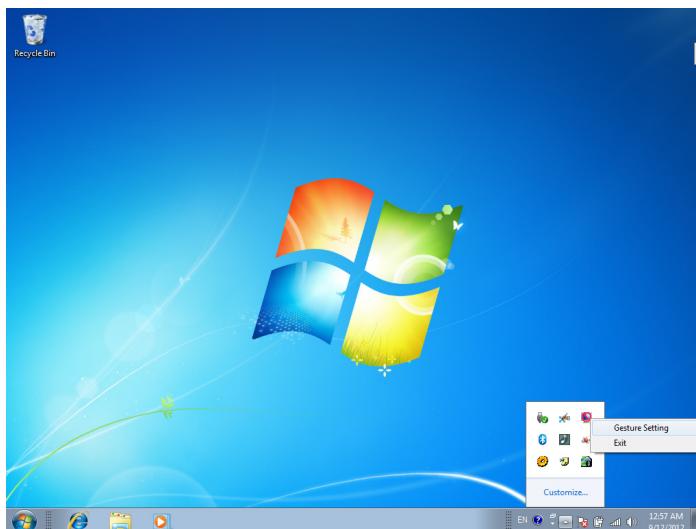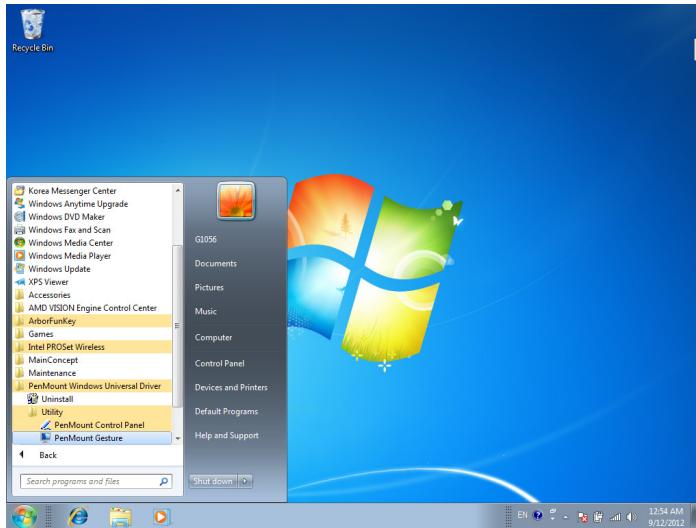

2. Check “Enable” and click the upward arrow in red square. You may also disable gesture function by canceling “Enable” box.

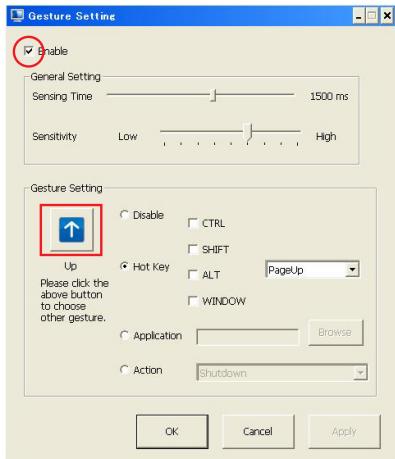

3. And then another **Gesture Select** window will pop up. Each mark in this menu represents your gesture on screen. For example, the upward arrow indicates that you move your finger across the touch screen from bottom to top. The rest are similar. You may use your gesture applied on the touchscreen to do further configuration. Select a gesture you would like to define.

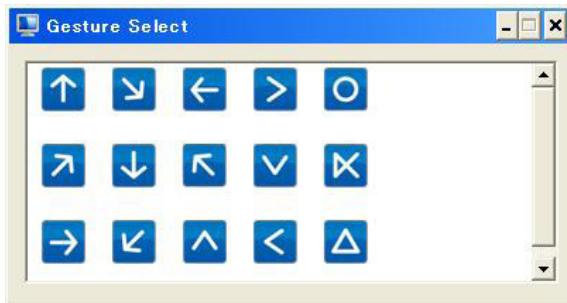

4. Then again, choose **Hot Key**, **Action** or **Application** to set each gesture's corresponding function. You may disable respective gesture, too. And remember to press **Apply** after all.

